


# IP110 EXPLODED VIEW & PART NUMBERS

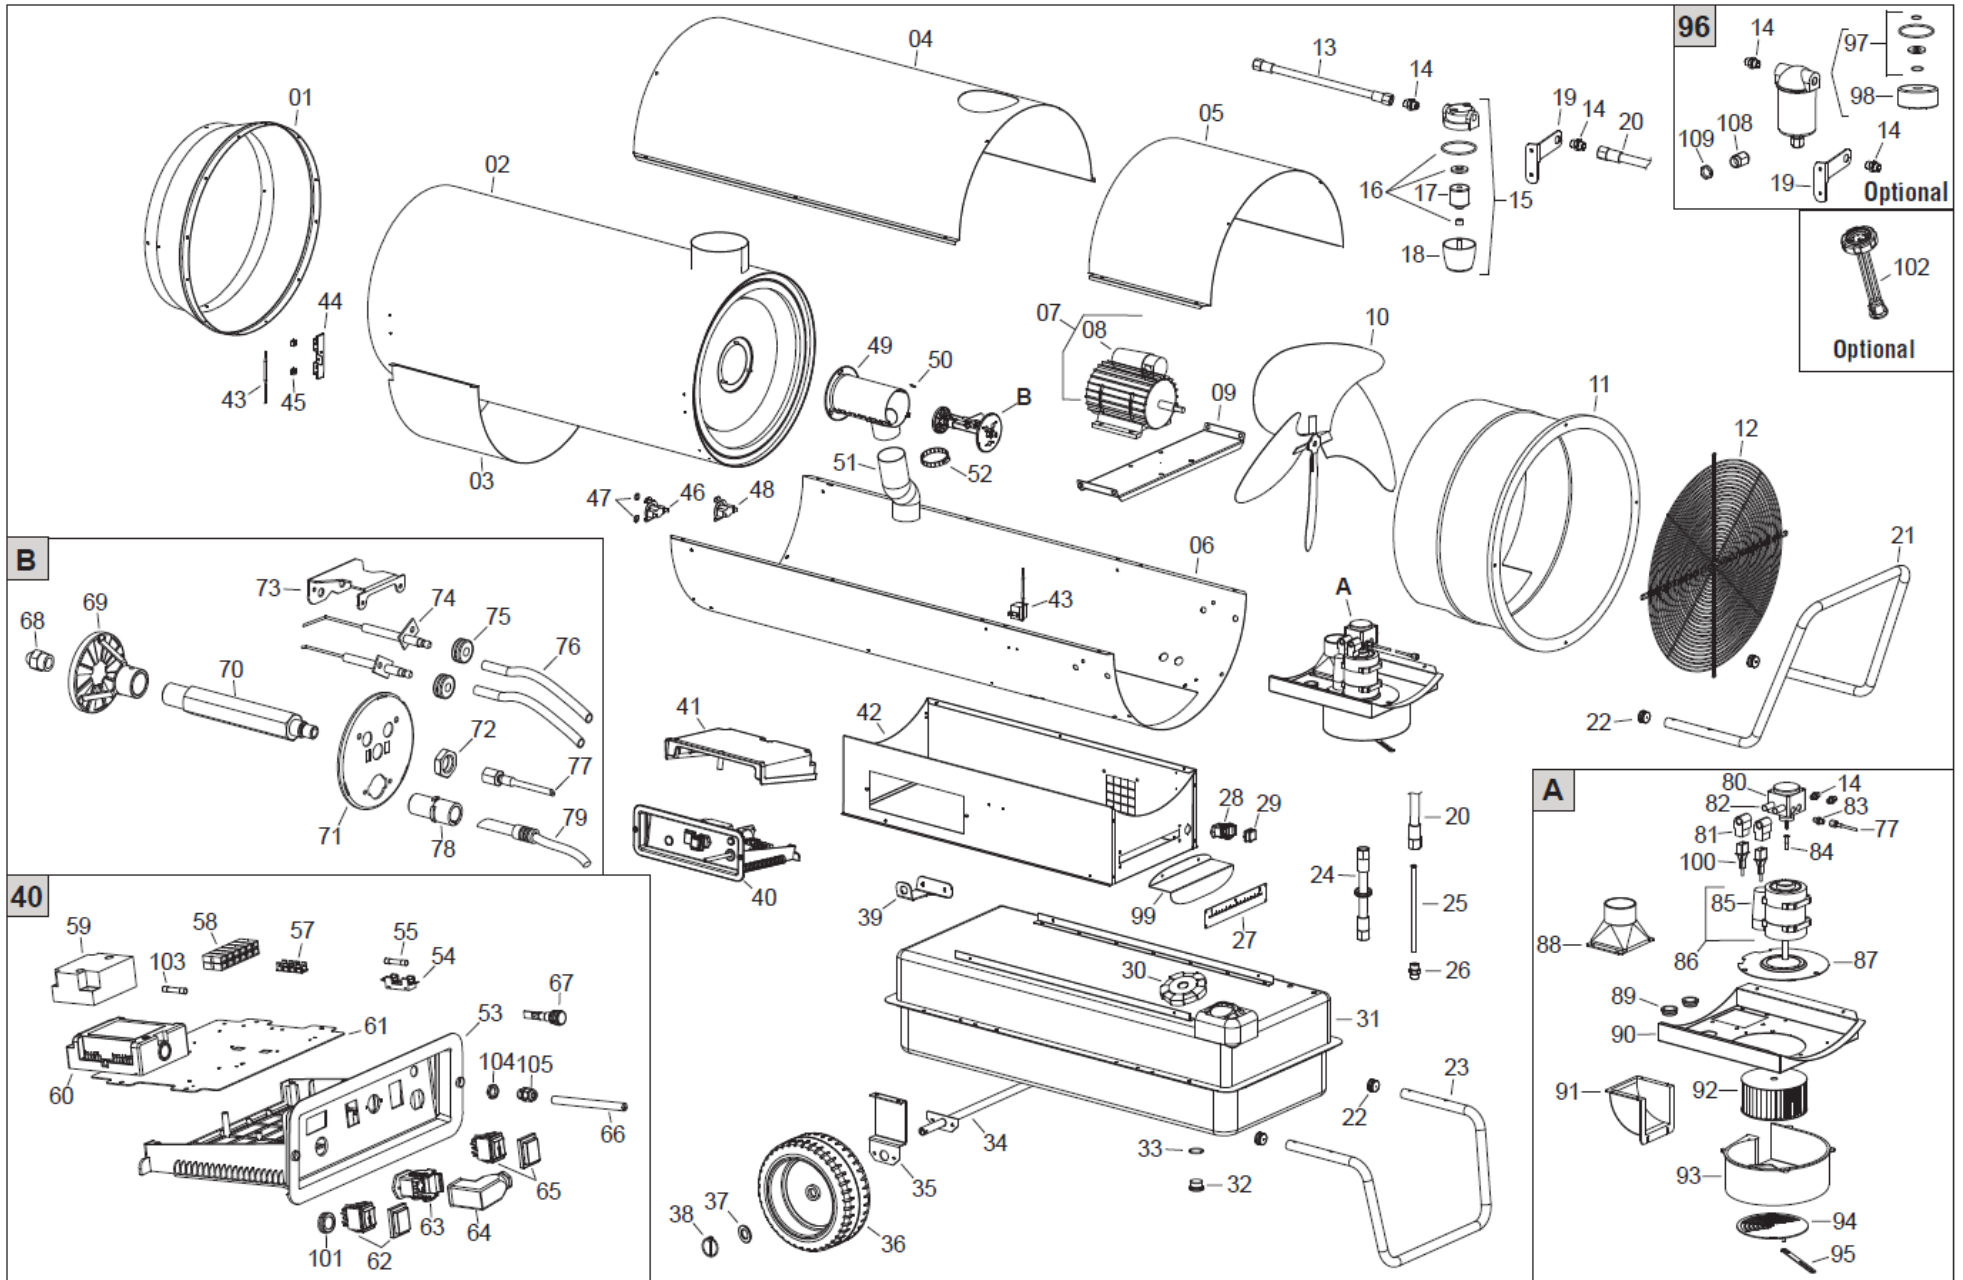

PL 01/18		From S/N
		21611001
POS	PART NUMBER	DESCRIPTION
1	BDG061859010	Outlet cone
2	BDG06186	Combustion chamber
3	BDG06187	Insulating panel
4	BDG061889010	Upper body
5	BDG061899010	Inspection panel
6	BDG061909010	Lower body
7	BDE10688	Motor
8	BDE11238	Capacitor
9	BDG06191	Motor support bracket
10	BDT10265	Fan
11	BDG061929010	Air conveyor
12	BDP30151	Inlet grill
13	BDI40330	Flex diesel pipe
14	BDI20104	Iron fitting
15	BDT20201	Diesel filter
16	BDT20234	Filter seal kit
17	BDT20206	Filter cartridge
18	BDT20212	Filter container
19	BDG061049005	Filter support bracket
20	BDI40329	Flex diesel pipe
21	BDP201769005	Handle
22	BDC30355	Pipe cap
23	BDP201839005	Support
24	BDI40331	Flex diesel pipe
25	BDI30698	Suction pipe
26	BDI30737	Brass fitting
27	BDG06193	Panel
28	BDE20639	Thermostat plug
29	BDE20665	Thermostat plug cover
30	BDC30356	Tank cap
31	BDG061469005	Fuel tank
32	BDI25020	Drain cap
33	BDC30375	O-ring
34	BDG064179005	Wheel axle
35	BDG064459005	Wheels axle support bracket
36	BDC10559	Rad Wheel
37	BDM20111	Washer

38	BDM20505	Latched pin
39	BDG060689005	Power cord support
40	BDG00306	El. control box
41	BDP50127	Control box cover
42	BDG061959010	Socket Base
43	BDE50767	Safety thermostat
44	BDG06196	Thermostat support bracket
45	BDM20413	Hose bracket
46	BDE50102	Safety thermostat
47	BDM20107	Washer
48	BDE50104	Fan Thermostat
49	BDG06197	Blast tube
50	BDE20671	Terminal board
51	BDI40804	Duct
52	BDC30730	Clip
53	BDG06154	El. control box panel
54	BDE20508	Fuse holder
55	BDE10323	Fuse
57	BDE20319	Ground terminal board
58	BDE20305	Terminal board
59	BDE10920	H.T. Transformer
60	BDE40152	Flame control box
61	BDG06073	Support plate
62	BDE10102P	Switch
63	BDE20640	Thermostat plug
64	BDE20675	Plug with jumper
65	BDE10112P	Switch
66	BDE30494	Power cord
67	BDE11030	Lamp
68	BDT20357	Nozzle
69	BDG06225	Diffuser ring
70	BDI33006	Nozzle support
71	BDG06226	Burner support disc
72	BDI31034	Brass lock nut
73	BDG06199	Electrodes support stirrup
74	BDE10215	Ignition electrode
75	BDC30368	Cable protection
76	BDG02075	H.T. Cable connect.
77	BDI40192	Micropipe
78	BDE50327	Photoresistor support

79	BDE50332	Phototransistor
80	BDT20460	Diesel pump
81	BDT20458	Solenoid coil
82	BDT20130	Solenoid valve body pair
83	BDI20115	Iron fitting
84	BDE10698	Motor-pump coupling
85	BDE11246	Capacitor
86	BDE10697	Motor
87	BDG062009010	Motor flange
88	BDC10328	Elbow connection
89	BDC30372	Cable protection
90	BDG062019010	Motor support bracket
91	BDC10329	Elbow connection
92	BDT10257	Fan
93	BDC10326	Scroll
84	BDG06202	Air adjustment shutter
95	BDG06203	Air adjustment lever
96	BD02AC569	Diesel pre-heaters filter kit
97	BDT20241	Filter seal kit
98	BDT20242	Filter cartridge
99	BDG06204	Panel
100	BDT20442	Solenoid valve cable
101	BDE20418L	Stop button protection
102	BD02AC510	Cap with level control
103	BDE10303	Fuse
104	BDE20965	Cable fastener nut
105	BDE20964	Cable fastener